REXEL

RDS 2050
RDX 1750
RDS 2270
RDX 1970

RSX 1530
RSS 1830
RSS 2230

Mercury

- (GB) *Instruction Manual*
- (F) *Manuel d'utilisation*
- (D) *Bedienungsanleitung*
- (I) *Manuale d'istruzioni*
- (NL) *Gebruiksaanwijzing*
- (E) *Manual de instrucciones*
- (P) *Manual de Instruções*
- (TR) *Kullanım Kılavuzu*
- (GR) *Οδηγίες*
- (DK) *Brugsvejledning*
- (FI) *Käyttöopas*
- (NO) *Bruksanvisning*
- (S) *Bruksanvisning*
- (PL) *Instrukcja obsługi*
- (CZ) *Návod k obsluze*
- (H) *Használati útmutató*
- (RUS) *Руководство по эксплуатации*

ATTENTION

To register and activate the warranty go to
www.accoeurope.com

Specifications

Models	RSX1530	RSS1830	RSS2230
Sheet Capacity -	13 sheets	15 sheets	19 sheets
Duty Cycle -	4 min on / 30 min off	4 min on / 30 min off	4 min on / 30 min off
Duty Cycle -	2 min on / 10 min off	2 min on / 10 min off	2 min on / 10 min off
Duty Cycle -	2 min on / 20 min off	2 min on / 20 min off	2 min on / 20 min off
Volts / Hz	230-240V AC / 50Hz	230-240V AC / 50Hz	230-240V AC / 50Hz
Amperage	1.7A	1.2A	1.2A

IMPORTANT: ONLY INSERT ONE CD OR ONE CREDIT CARD AT A TIME.

English 4
Français 6
Deutsch 8
Italiano 10
Nederlands 12
Español 14
Português 16
Türkçe 18
Ελληνικά 20
Dansk 22
Suomi 24
Norsk 26
Svenska 28
Polski 30
Česky 32
Magyar 34
Русский 36

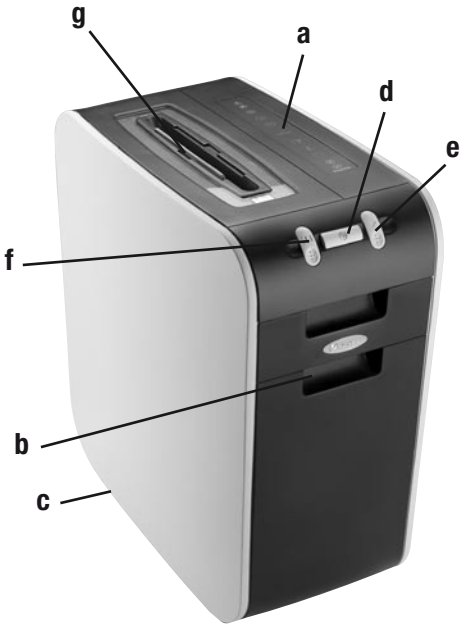

Models: RSX1530, RSS1830, RSS2230

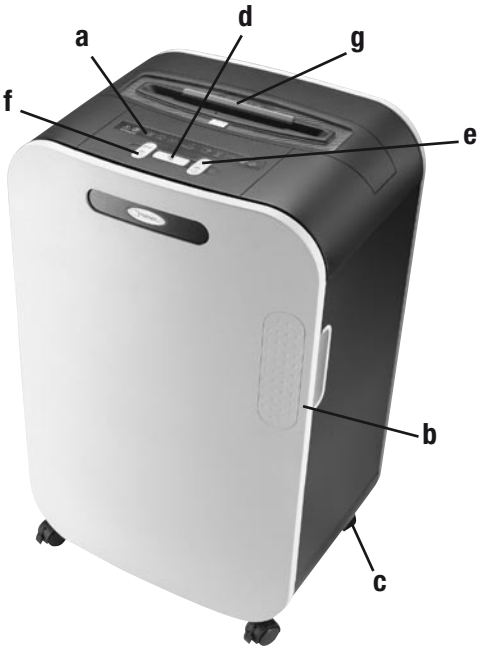

Models: RDS2050, RDX1750, RDS2270, RDX1970

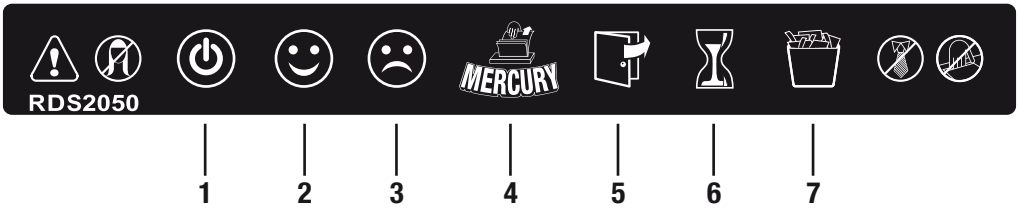

Illuminated Panel

Lights and Icons Explained

	Illumination		1 Power on	2 Happy face	3 Sad face	4 Anti-jam	5 Door open	6 Cool down	7 Bin full
Colour of LED	**Green**	**Red**	**Amber**	**Green**	**Red**	**Red**	**Red**	**Amber**	**Red**
Power on button pushed / no fault			light						
Door open			light		light		flash		
Bin full			light		light				flash
Motor overheat			light		light			flash	
Auto button pushed / shredding	light		light	light					
Anti-jam at Measure mode		light	light		light	flash			
Anti-jam at Running mode		light	light		light	flash			
Forward jammed		light	light		light				
Reverse jammed		light	light		light				
Reverse button pushed		light	light						
Auto mode	light		light	light					

Introduction

Thank you for choosing this shredder from Rexel. We are sure it will serve you well, but please take a little time to study these instructions to ensure you get the best out of your machine.

a Indicator Panel
b RSX1530, RSS1830, RSS2230: Pull Out Drawer
RDS2050, RDX1750, RDS2270, RDX1970: Door for Bin
c Wheels
d Power On Button
e Auto Feed Button
f Reverse Button
g CD Guide

1 Power On (Amber Light)
2 Shredder OK (Green Light)
3 Shredder not OK (Red Light)
4 Anti Jam. Too many sheets (Red Light)
5 Door Open (Red Light)
6 Cool Down (Amber Light)
7 Bin Full (Red Light)

Safety First

Shredders are safe to use as long as you take a few safety precautions.

- Ensure the machine is plugged into an easily accessible power outlet, and ensure the cable is not likely to trip up a passer by.
- Any attempt to repair this unit by unqualified personnel will invalidate the warranty. Please return to supplier.
- Unplug your shredder before moving it or when it is not in use for an extended period of time.
- Do not operate with a damaged power supply cord or plug, after it malfunctions, or after it has been damaged in any manner.
- Do not overload electrical outlets beyond capacity as this can result in fire or electrical shock.
- The socket-outlet should be installed near the equipment and shall be easily accessible.
- Do not alter the attachment plug. The plug is configured for the appropriate electrical supply.
- Do not use near water.
- Do not use aerosol dusters or cleaners.
- Do NOT Spray anything into the shredder.

Although this shredder has been designed to be child safe, it is not advised to operate the machine near children.

Mercury Anti-Jam Technology

Mercury Shredders will only shred stacks of paper that are within the shredders sheet capacity. Eg. A shredder with a capacity between 20 and 22 sheets will not allow the shredding of more sheets than this.

Sensors in the paper feed area measure the thickness of paper about to be shredded. The ability to shred or not is communicated through red and green lighting. Green means that the stack of paper is within the shredders sheet capacity and OK to shred. Red means that you have too much paper, remove some sheets in order to shred.

Given that you are unable to shred more sheets of paper than the shredder is capable of shredding, paper jams are prevented.

This prevents time wasted through reversing paper and unblocking jams not to mention the mess it can create.

Warranty

Models - RSX1530, RSS1830, RSS2230
This machine is guaranteed for 24 months from the date of purchase. Please return the unit to your supplier. This does not affect your statutory rights.

Models - RDS2050, RDX1750, RDS2270, RDX1970
This machine is guaranteed for 24 months for the full product with an extra 36 months on the cutting heads.

Operation

1. Connect shredder to mains supply
2. Press the central power on button (d). This will switch the power on and all the LED warning symbols on the indicator panel (a) will flash in sequence. The shredder will now be in standby mode and the "Power-on" symbol on the indicator panel will be illuminated amber.
3. To commence shredding, press the right hand auto feed button (e) this will illuminate the feed area green and illuminate the ☺ symbol green.

   This sets the shredder into auto mode and initiates the Mercury anti jam mechanism. You are now able to shred.
4. Insert paper to be shredded into the feed area. The Mercury anti jam mechanism will sense the thickness of the paper being shredded.

   If the paper thickness is within the shredders capacity the motor will start and your documents will be shredded. Cutters will stop once the shredding process is complete.

   If the paper thickness is greater than the shredders sheet capacity the area around the feed slot will turn from green to red and the motor will not run. In this situation the Mercury Icon on the indicator panel will flash red, the green ☺ will go off, instead the ☹ will be illuminated red.
5. If this happens, remove some of the sheets from the paper stack and re-try until the feed area reverts back to green, the shredder will then automatically start and allow the paper to be shredded.

   If the shredder is left in auto mode for more than 10 minutes without being used, the shredder will automatically turn back to standby mode in order to save power.

Reverse Function

1. Should you wish to reverse the shredding direction whilst shredding a document, a reverse button (f) has been fitted for your convenience.
2. By pressing the reverse button the shredding cutters will change direction allowing the retrieval of the document being shredded. The feed area will turn to red.
3. The reverse function will only run whilst the button is being pressed. When the reverse button has been released the shredder will revert to stand by mode.
4. To turn back to auto mode simply press the right hand auto feed button again.

CD and Credit Card Shredding

The Mercury models can also shred CDs and credit cards.

1. Pull up the orange CD guide (g) located in the centre of the feed area and flip it into position over the shredder mouth.
2. For credit card shredding, switch the shredder to auto mode and insert the card into the centre slot.
3. For CD shredding, extend the sides of the orange CD guide, switch the shredder to auto mode and place the CD into the centre of the CD slot.

Only 1 CD can be shred at a time.

Rare Occasions of Jamming

In the unlikely event of the shredder jamming, use the reverse function to unblock the shredder. (see Reverse function section)

Alternating between the reverse function and the forward run (Hold Auto start for 2 seconds) will help unblock the feed area.

Once the jam is clear, press the right hand auto button once to revert back to auto mode. You can now resume shredding as normal.

Bin Full

When the bin is full the shredder will not function and the bin full symbol will illuminate and flash red, the green ☺ will switch off and the ☹ will illuminate red.

When this happens you must empty the bin.

- Pull open the drawer to empty. (RSX1530, RSS1830, RSS2230)
- Open the door to locate the bin (RDS2050, RDX1750, RDS2270 RDX1970)

Once the bin is empty, close the door/drawer and press the auto button to resume shredding.

Door Open Safety Function

If the door is opened during shredding as a safety precaution the shredder will instantly stop, and the door open symbol on the indicator panel will flash red. The green ☺ will go off and the red ☹ flash will illuminate. To resume shredding, shut the door and press the auto button.

Over Heating

If the shredder is used continuously for long periods of time the shredder may overheat. If this occurs the egg timer symbol on the indicator panel will flash amber, the green ☺ will go off and you will see the red ☹.

When the shredder is ready to be used again the egg timer symbol will stop flashing and the green ☺ will show once again. To resume shredding press the auto button.

Shredder Waste Sacks

Rexel shredder waste sacks AS1000 (Code 40070) should be used with models RDS2050, RDX1750, RDS2270, RDX1970. We recommend that no waste sacks are to be used for the models RSX1530, RSS1830, RSS2230.

Service

(GB) **ACCO Service Division**
Freepost 193, Hereward Rise, Halesowen, West Midlands, B62 8AN.
Tel: 0845 658 6600, Fax: 0870 4215576, www.acco.co.uk/service

ACCO UK Sales International
Oxford Road, Aylesbury, HP21 8SZ.
Tel: 00 44 1296 397444, Fax: 00 44 1296 311000

(F) **ACCO France**
Service Aprés-Vente, 8 Rue du 19 Mars 1962, 21601 Longvic, Cedex BP7/ZI.
Tel: 0802 872 356, Fax: 03 80 68 60 49

(NL) **ACCO Benelux**
Peppelkade 64, 3992AK Houten.
Tel: 030-6346060, Fax: 030-6346070, info@accobenelux.nl, www.accobenelux.nl

(B) **ACCO Benelux (Technische Dienst)**
Peppelkade 64, 3992AK Houten, Nederland.
Tel: 02-4117416, Fax: 02-4140784, info@accobenelux.be, www.accobenelux.be

(D) **ACCO Deutschland**
(RUS) Arnoldstrasse 5, 73614 Scorndorf, Germany.
(H) Tel: +49 - 7181/887-160, Fax: +49 - 7181/887-165

(CZ) **XERTEC a.s.**
U Továren 770/1b, 102 00, Praha 10.
Tel: +420 271 741 800, Fax: +420 271 743 143, www.xertec.cz

(A) **ACCO Österreich**
Sallmann Bürotechnik GmbH, Esshaverstrasse 16, 5020 Salzburg.
Tel: 0662 4345 160, Fax: 0662 4345 164, e-mail: schinagl@sallmann.at

(S) **ACCO Schweiz**
ABC Bürotechnik AG, Winkelbüel 4, 6043 Adligenswil.
Tel: 041 375 6060, Fax: 041 375 6061,
e-mail: bruno.zraggen@abc-buerotechnik.ch

(DK) **Mailtech**
Baldersbaekvej 8B 2635 Ishoj.
Tel: 045 43 73 37 37, Fax: 0045 43 73 73 37 07, e-mail: hs@mailtech.dk

(N) **Sannum & Stang**
Gladengveien 16 0661 Oslo.
Tel: +4722685940, Fax: +4722686730, e-mail: post@sansta.no

(I) **ACCO Italia Spa**
Via Nenni 13, Settimo Torinese (TO) Via Regio Parco 10B/bis.
Tel: 011 896 11 11, Fax: 011 896 11 12

(IRE) **ACCO-Rexel Ltd**
Clonshaugh Business & Technology Park, Clonshaugh Dublin 17.
Tel: 01 816 4300, Fax: 01 816 4302

(PL) **ACCO Polska Sp. z o.o.**
Al-Jerozolimskie 184, 02-486 Warszawa.
Tel: +42 22 570 18 01, Fax: +48 22 570 18 33

(S) **ACCO Nordic Region**
Kontor 1, i norden AB Kanalvägen 16 194 61 Upplands Väsby.
Tel: 08 444 5191, Fax: 08 444 5199

(FI) **Somen Huoltopalvelu oy**
Kanaamouka 1 00360 Helsinki. Tel: 956 050 510, Fax: 956 050 500

(E) **ACCO Iberia SL**
(P) Isaac Peral 19, 28820 Coslada (Madrid). Tel: 91 669 9391, Fax: 91 672 07 11

(IS) **Oddi**
Höfdabakka 3-7 IS-112 Reykjavik. Tel: 00354 515 5000, Fax: 00354 515 5101

(TR) **Eraysan**
Ankara Cad N.129, Sirkeci, Istanbul.
Tel: 0090 212 6591686, Fax: 0090 212 5226992, eraysan@eraysan.com.tr

(AUS) **ACCO Australia Pty.**
Level 2 Building B, 8 Lord Street, Botany. NSW. Australia 2019.
Tel: 2 9700 0180, Fax: 2 9700 0195

ACCO Brands Europe
Oxford House
Aylesbury HP21 8SZ
United Kingdom

www.accoeurope.com